

Bedienfeld CX 4 Program Mode/Lautstärke-Eingabe

1/4-Sequenz



Empty box for Takt 1

Takt 1

Empty box for Takt 2

Takt 2

Empty box for Program

Program

Gruppe 1

Gruppe 2

Aufnahme/
Lautstärke

1 + 2 aus = Gruppe 3

Begleitung

Empty box for Bass

Bass

Empty box for Akkord

Akkord

Empty box for Solo

Solo

Speicher

Tempomat

Sequence

Takt/Löschen

Gruppe 1

Bass Drum

Snare

Hihat closed

Cymbal 1

Tom high

Bongo high

Tambourin

Cowbell

Instrumente
Laut

Empty box for Instrumente Laut

Gruppe 2

Disco Bass

Disco Snare

Hihat open

Cymbal 2

Tom low

Bongo low

Brush

Synthedrum

Instrumente
Leise

Empty box for Instrumente Leise

Gruppe 3

Bass 3

Snare Roll

Maracas

Crash Cym.

Clap

Rimshot

Cowbell 2

Claves