



MIDI Implementation Chart

Model: **Organ DX 10**
Expander EX10R

Date: **10.11.89**
Version: **1.60**

FUNCTION		TRANSMITTED	RECOGNIZED	REMARKS
Basic Channel		1-8, 16	1-8, 16	UM, LM, Ped, Solo, Chord,
Default Channel		X	X	Bass, Wersichord, LM-Hold, Drums
Mode	Default Messages Altered	Mode 3	Mode 3	Multi Mode, 6 Instruments
Note Number		* 48-96 * 36-84 * 36-48 40-96 36-65	1-127 1-127 1-127 1-127 36-65 36-126	UM, Wersichord LM, LM-Hold Pedal Accompaniment 1-3 Drums
True Voice				
Velocity	Note ON Note OFF	O 9nH, v=1-127 O 9nH, v=0	O 9nH, v=1-127 O 9nH, v=0/8nH	
After Touch	Keys Channels	X O	X O	
Pitch Bender		O	O	
Control Change		1 4 7 64 65	1 4 7 64 65	Wheel 2 VCF Foot Controller Channel Volume Footswitch 1 Footswitch 2
Program Change		0-19 20-29 40-59 60-69 70-77	0-19 20-29 40-59 60-69 70-77	ROM Sounds RAM Sounds Cartridge 1 Cartridge 2 Total Preset RAM
	True#		0-29 /40-77	
System Exclusive		O	O	
System Common	Song Pos. Song Sel. Tune	X X X	X X X	
System Real Time	Clock Commands	X X	O O	Start, Stop
AUX Mes-sages	Local on/off All Notes off Active Sens. Reset	X X X X	X O X X	
Notes		* only DX 10		

Mode 1: OMNI ON, POLY
Mode 3: OMNI OFF, POLY

Mode 2: OMNI ON, MONO
Mode 4: OMNI OFF, MONO

O : Yes
X : NO